

Alert Quick Guide

Analysis report search



Go to: <https://www.lubetrend.com>

oilAnalysis

Log In

Username

Password

Log in


Forgot Password

Enter your log in details
and click on Log in

Start page


Dashboard - Your Analysis Programme At A Glance

Geographic Overview - Locations Samples Taken

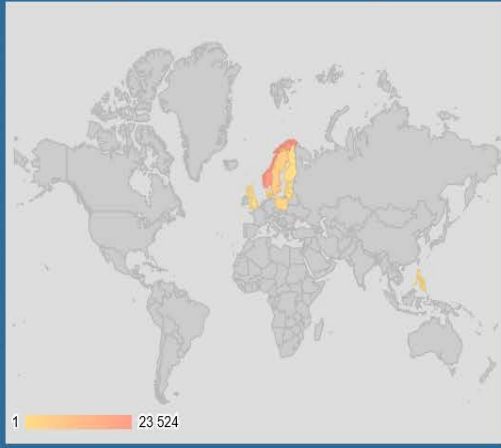

Diagnosis Advice Action Summary

Diagnosis Advice Action flags Over Time Period Below

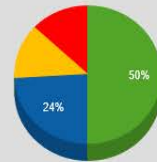

✓ Normal	(526)	50.00%
■ Resample	(253)	24.05%
⬇ Filter	(136)	12.93%
⚙ Oil Change (1)		0.10%
⚠ Check Unit	(136)	12.93%

For the last 1 Month

Pre-reg / App In-Transit Samples

STATOIL SWEDEN 2 [View/Edit Pre-reg data](#)

New Unread Reports Ready To View

🔴 Serious	273 Reports Unread	View Unread Reports	Mark All as Read
🟡 Caution	247 Reports Unread	View Unread Reports	Mark All as Read
🟢 Normal	524 Reports Unread	View Unread Reports	Mark All as Read

For the last 1 Month

Fast Finder - Find Results Fast!

Sample Number

Exact Match

Find a sample by filling out one of these parameters

Samples Received & In Progress In Lab

90 of your samples are being analysed & will be ready soon [View In Progress](#)

Here you see if your samples have been registered at the lab

Browsing of reports and export to Excel



Click on icon to download report

hello Josefine Holroyd [Change Password](#) [Contact Us](#) [Log Off](#)

[Dashboard](#) [Results](#) [KPI](#) [Pre-Reg](#) [Sample Labels](#) [Docs](#) [Admin](#)

Results - Find, Trend, Download, Export & Email Samples

You can use all these fields when browsing for reports

Recent Archived

Samples - 1 Row Selected

Received Date From 2015-10-24 To 2016-10-25 Actions None Selected Unread Only Authorised Only Unpublished Exact Match

	Sample No	Received Date	Action Flag	S/N, M/C or Equip#	Kit Ref	CLIQUI Client ID	Company Name	Unit Client	Sample By	Make	Model	System Desc	Sys Class	Paper Type	Sys unid ID
<input checked="" type="checkbox"/>	5257799	2016-01-15	✓	2016-01-11(1)	L42221780002	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso					ENGINE	E	STA_SE	42221
<input type="checkbox"/>	5233156	2016-01-13	✓	F2015-3400	I42212700001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			B 1061905		TRANSMISSION	WG	STA_SE	42212
<input type="checkbox"/>	5233155	2016-01-13	✓	F2015-3820	I42212740001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			B 1007061		TRANSMISSION	WG	STA_SE	42212
<input type="checkbox"/>	5233154	2016-01-13	✓	F2015-1871	I42212610001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			B 965662		TRANSMISSION	WG	STA_SE	42212
<input type="checkbox"/>	5233153	2016-01-13	✓	F2015-3754	I42212720001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			B 1079970		TRANSMISSION	WG	STA_SE	42212
<input type="checkbox"/>	5221218	2015-12-17	✗	2015-737	L42147840001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso					Okänt prov	6	STA_SE	42147
<input type="checkbox"/>	5221218	2015-12-08	✗	Blending	I41940630019	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			1029690		GEARBOX	G	STA_SE	41940
<input type="checkbox"/>	5221218	2015-12-04	✓	2015-702	L41630410099	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso				Hydraulsystem	ECC	H	STA_SE	41630
<input type="checkbox"/>	5221218	2015-10-29	✗	RXF 34 160	L42021390001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			GAFFEL		HYDRAULIC	H	STA_SE	42021
<input type="checkbox"/>	5221218	2015-10-26	✓	2015-615	L41992420001	STA_SE_W_00141	FUCHS LUBRICANTS Lab Adviso			PG		Märkt med 'Olj	G	STA_SE	41992

Export all to CSV
 Export selected to CSV
 Deselect all
 Email selected reports to yourself
 Generate PDF Reports

Menu Page 2 of 3 10

View 11 - 20 of 21

Export data for all or selected reports to a spreadsheet

Please note! The columns in the spreadsheet need to be comma delimited (for instructions, see next slide)

Comma separation of spread sheets

1. Select a column

The screenshot shows the Microsoft Excel interface. In the 'Data' tab, the 'Text to Columns' button is highlighted with a red box. In the spreadsheet, column A is selected, also highlighted with a red box. The 'Convert Text to Columns Wizard - Step 1 of 3' dialog box is open, showing the 'Delimited' option selected under 'Choose the file type that best describes your data:'. The preview window shows the data from column A: 'Paper, CliQui, Group Name, Description, Client Name, Contact, Address 1, Fax Num, Phone Number, Cost Factor, Report For STA_SE, "SVENYNA", "DEFAULT", "", "STATOIL LUBRICANTS", "Adriana Mitrus", "RAFFINADERIVÄ, GEN", "", "", "0", "", "adm@st'.

2. Click on Text to columns button in Data tab

3. Select Delimited
Click Next

Select Comma
and click Next

Convert Text to Columns Wizard - Step 2 of 3

This screen lets you set the delimiters your data contains. You can see how your text is affected in the preview below.

Delimiters

Tab

Semicolon

Comma

Space

Other:


Treat consecutive delimiters as one

Text qualifier: ▼

Data preview

Paper	CliQui	Group Name	Description	Client Name	Contact
STA_SE	SVENYNA	DEFAULT		STATOIL LUBRICANTS	Adriana

Cancel < Back Next > Finish

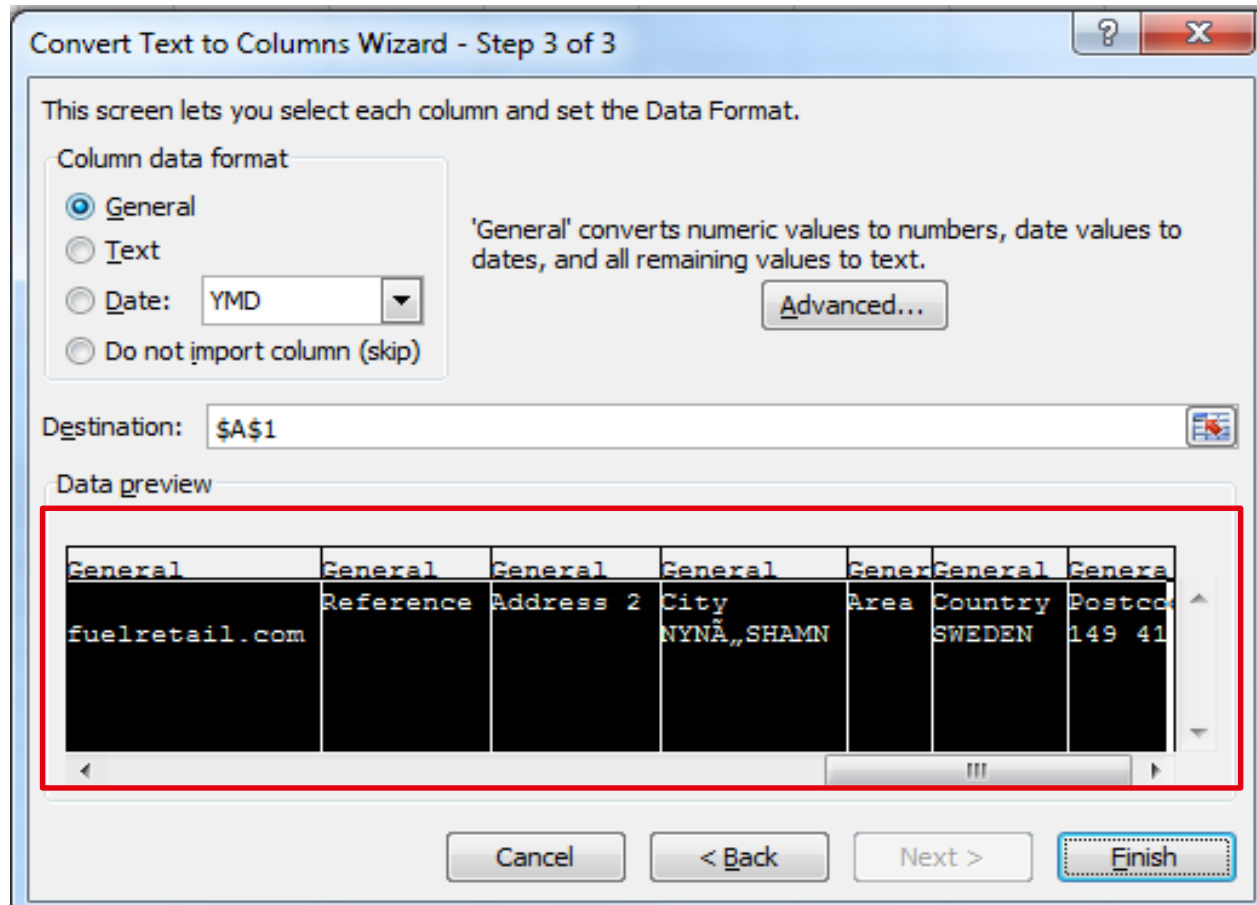

Select all columns (select the first column and Shift + last column)

Click on Finish

If you need any additional support
or if you have any questions,
please contact
alert@fuchs-oil.com

